

Following parts list of <b>GG0028-1-D</b> trimmer device				
Ref	Part Number	Description	Q	Detail
H01	7.02.19.032	Thread trimming electromagnetic	1	
H02	7.02.15.037	Thread trimming electromagnetic screw	4	M3×6
H03	7.02.18.123	Thread trimming electromagnetic screw washer	4	GB/T97.1 3
H04	7.02.17.125	Thread trimming electromagnetic fixed plate	1	
H05	7.02.15.032	Thread trimming electromagnetic fixed plate screw	2	M4×8
H06	7.02.05.163	Thread trimming electromagnetic link lever	1	
H07	7.02.10.136	Thread trimming electromagnetic link lever pin	1	
H08	7.02.18.024	E-ring	3	GB/T896-1986-3
H09	7.02.15.096	Thread trimming parts setting bracket screw	3	M5×16
H10	7.02.13.073	Thread trimming parts setting bracket	1	
H11	7.02.15.268	Crank connection screw/nut	3	GB/T6170 M4
H12	7.02.06.075	Link lever crank (upper)	1	
H13	7.02.10.137	Link lever crank pin	1	
H14	7.02.15.097	Crank connection screw	2	M4×6.5
H15	7.02.17.018	Replacement spring	2	
H16	7.02.10.144	Replacement spring pin	1	
H17	7.02.15.006	Link lever crank pin screw	11	M4×8
H18	7.02.11.101	Release soft-shaft fixed press plate	1	
H19	7.02.11.100	Release soft-shaft fixed plate	1	
H20	7.02.05.172	Link lever	1	
H21	7.02.06.076	Link lever crank (lower)	1	
H22	7.02.15.416	Link lever crank (lower) screw	2	M5×12
H23	7.02.12.073	Stopper block	1	
H24	7.02.15.430	Stopper block screw	3	M5×10
H25	7.02.06.077	Release crank	1	
H26	7.02.16.122	Release soft-shaft connection	1	
H27	7.02.06.078	Thread trimming drive crank	1	
H28	7.02.03.111	Thread trimming crank shaft	1	
H29	7.02.18.039	E-ring	1	GB/T896-1986-5
H30	7.02.06.079	Thread trimming vibrating crank	1	
H31	7.02.10.139	Thread trimming drive crank pin	1	
H32	7.02.10.138	Thread trimming vibrating crank pin	1	
H33	7.02.18.031	E-ring	6	GB/T896-1986-4
H34	7.02.18.016	Washer	1	GB/T97.1 5
H35	7.02.17.019	Replacement spring	1	
H36	7.02.18.071	Washer	1	GB/T97.1 4
H37	7.02.15.099	Thread trimming link lever adjustable screw	1	
H38	7.02.15.098	Thread trimming vibrating crank stopper screw	1	M4×20
H39	7.02.05.173	Thread trimming link lever (right)	1	
H40	7.02.10.140	Thread trimming link lever pin	2	
H41	7.02.10.141	Thread trimming link and vibrating lever pin	1	
H42	7.02.08.039	Thread trimming link and vibrating lever pin bushing	1	
H43	7.02.05.177	Thread trimming link and vibrating lever	1	
H44	7.02.05.093	Thread trimming link lever tie-in	2	
H45	7.02.10.193	Thread trimming link lever joint lever	1	
H46	7.02.15.622	Thread trimming link lever nut (left)	1	M5(left)
H47	7.02.05.171	Thread trimming link lever (left)	1	
H48	7.02.15.068	Thread trimming link lever nut	1	GB/T6170 M5
H49	7.02.05.174	Thread trimming vibrating lever	1	
H50	7.02.10.143	Thread trimming vibrating lever eccentricity pin	1	
H51	7.02.15.056	Thread trimming vibrating lever eccentricity pin screw	1	M5×6
H52	7.02.15.053	Thread trimming vibrating lever socket setting screw	3	M5×12
H53	7.02.13.074	Thread trimming vibrating lever socket	1	
H54	7.02.10.142	Thread trimming vibrating lever pin	1	
H55	7.02.18.059	Washer	1	
H56	7.02.21.085	E-ring	1	GB/T896-1986-9
H57	7.02.15.102	Movable knife support plate screw	2	M4×6.5
H58	7.02.11.103	Movable knife support plate	1	
H59	7.02.20.030	Movable knife	1	
H60	7.02.11.102	Movable knife guide plate	2	
H61	7.02.15.100	Movable knife guide plate screw	2	M4×4
H62	7.02.15.103	Fixed knife screw	1	
H63	7.02.20.031	Fixed knife	1	
H64	7.02.15.104	Thread trimming pressure adjustable screw	1	
H65	7.02.02.073	Slide plate	1	
H66	7.02.15.388	Slide plate screw	2	M4×8
H67	7.02.15.101	Movable knife assistant support plate screw	2	M3×4
H68	7.02.18.061	Spring washer	2	GB/T93. 3
H69	7.02.11.098	Movable knife assistant support plate	1	
H70		Felt	1	
H71	7.02.17.032	Release lever replacement spring	1	